



Warnings

Always make sure the luminaire is detached from the mains socket
 Always make sure the DC cable is detached from the power supply
 Staring at the operating light source may cause eye injury

| # | SLR Description | Tools needed |
|---|---|---------------------------|
| a | Rotate the front window [1] by hand counter clockwise until it unsnaps. Lift the front window up to remove it from the Base [7] | - |
| b | Remove the Diffuser [2] and Cover Foil [3] by hand. The diffuser is slightly clamped in the reflector [5] | - |
| c | Unscrew the 3 screws [4] and remove the reflector [5] | Torxhead Screw driver T10 |
| d | Unplug the flat wire from the light source [6] and remove the light source from the Base [7] | - |
| e | Unscrew the screw [11]. Pull the foot [10] loose from the Base [7] | Allen Key |
| f | Pull the cable [12] out of the Hue Connect [8]. | - |
| g | Remove the Cable [12] and Hue Connect [8] | - |

| # | COMPONENT | QTY |
|----|--------------------------|-----|
| 1 | Front Window | 1 |
| 2 | Diffuser | 1 |
| 3 | Cover Foil | 1 |
| 4 | Screws | 3 |
| 5 | Reflector | 1 |
| 6 | Light Source LED Module | 1 |
| 7 | Base | 1 |
| 8 | Control gear Hue Connect | 1 |
| 9 | Screw | 1 |
| 10 | Foot | 1 |
| 11 | Screw | 1 |
| 12 | Cable | 1 |

| SKU | Color | Country |
|--------------|-------|---------|
| 929002375901 | White | EU/UK |
| 929002376001 | Black | EU/UK |
| 929002376501 | White | NAM |
| 929002376601 | Black | NAM |

| | | | |
|---------|--|---------------|---------------|
| STATUS | DESCRIPTION | DESIGN ID | 01 2021-01-29 |
| | Hue Bloom Gen4 Disassembly Instruction | DOC 12NC | 442295201180 |
| NAME | Ma Vr | LOCAL PART ID | SH. 1 |
| CHECKED | DATE | 2021-01-29 | SH. 511 |
| | | | A2-P |