



Warnings

Always make sure the luminaire is detached from the mains socket
Always make sure the DC cable is detached from the power supply
Staring at the operating light source may cause eye injury

#	Disassemble/dismantle steps	Tools needed
a	Rotate the head [1] counterclockwise from the diffuser [9] over 10° until stopper	-
b	Open and remove the head [1] from the diffuser [9]	FLATHEAD SCREWDRIVER
c	Unplug flat cable [not visible] from Light Source -Led Module [6]	-
d	Unplug red and black wires [5] from Light Source -Led Module [6]	WAGO TOOL #2065
e	Unscrew 3 screws [3] and remove heatsink [2] with Light Source -Led Module [6] and foil [4]	TORXHEAD SCREW DRIVER T10

#	COMPONENT	QTY	SKU	Color	Country
1	Head	1	929003128401	White	EU/UK
2	Heatsink	1	929003128501	Black	EU/UK
3	Screw	6	929003128601	White	NAM
4	Foil	1	929003128701	Black	NAM
5	Wire	1	929003521401	White	EU/UK
6	Light Source -Led Module	1	929003521501	Black	EU/UK
7	Washer	3	929003521601	White	NAM
8	O-ring	1	929003521701	Black	NAM
9	Diffuser	1	929003128801	White	AU/NZ
			929003128901	White	CN
			929003129001	White	JP/K/TW

STATUS	DESCRIPTION	DESIGN ID
CHECKED <td>Hue Go Portable Table Lamp</td> <td>02 2022-08-02</td>	Hue Go Portable Table Lamp	02 2022-08-02
		DOC 12NC
		929003128401
NAME PA KU	LOCAL PART ID	SH. 1
	DATE 2022-05-26	SH. 511-1
		A2-P
PROPERTY OF: © 2022 Signify Holding		