

PHILIPS

Ledinaire

EcoSet


Quick start guide

Philips Ledinaire EcoSet for parking




a lighting brand by ignify

Exemplary parking garage

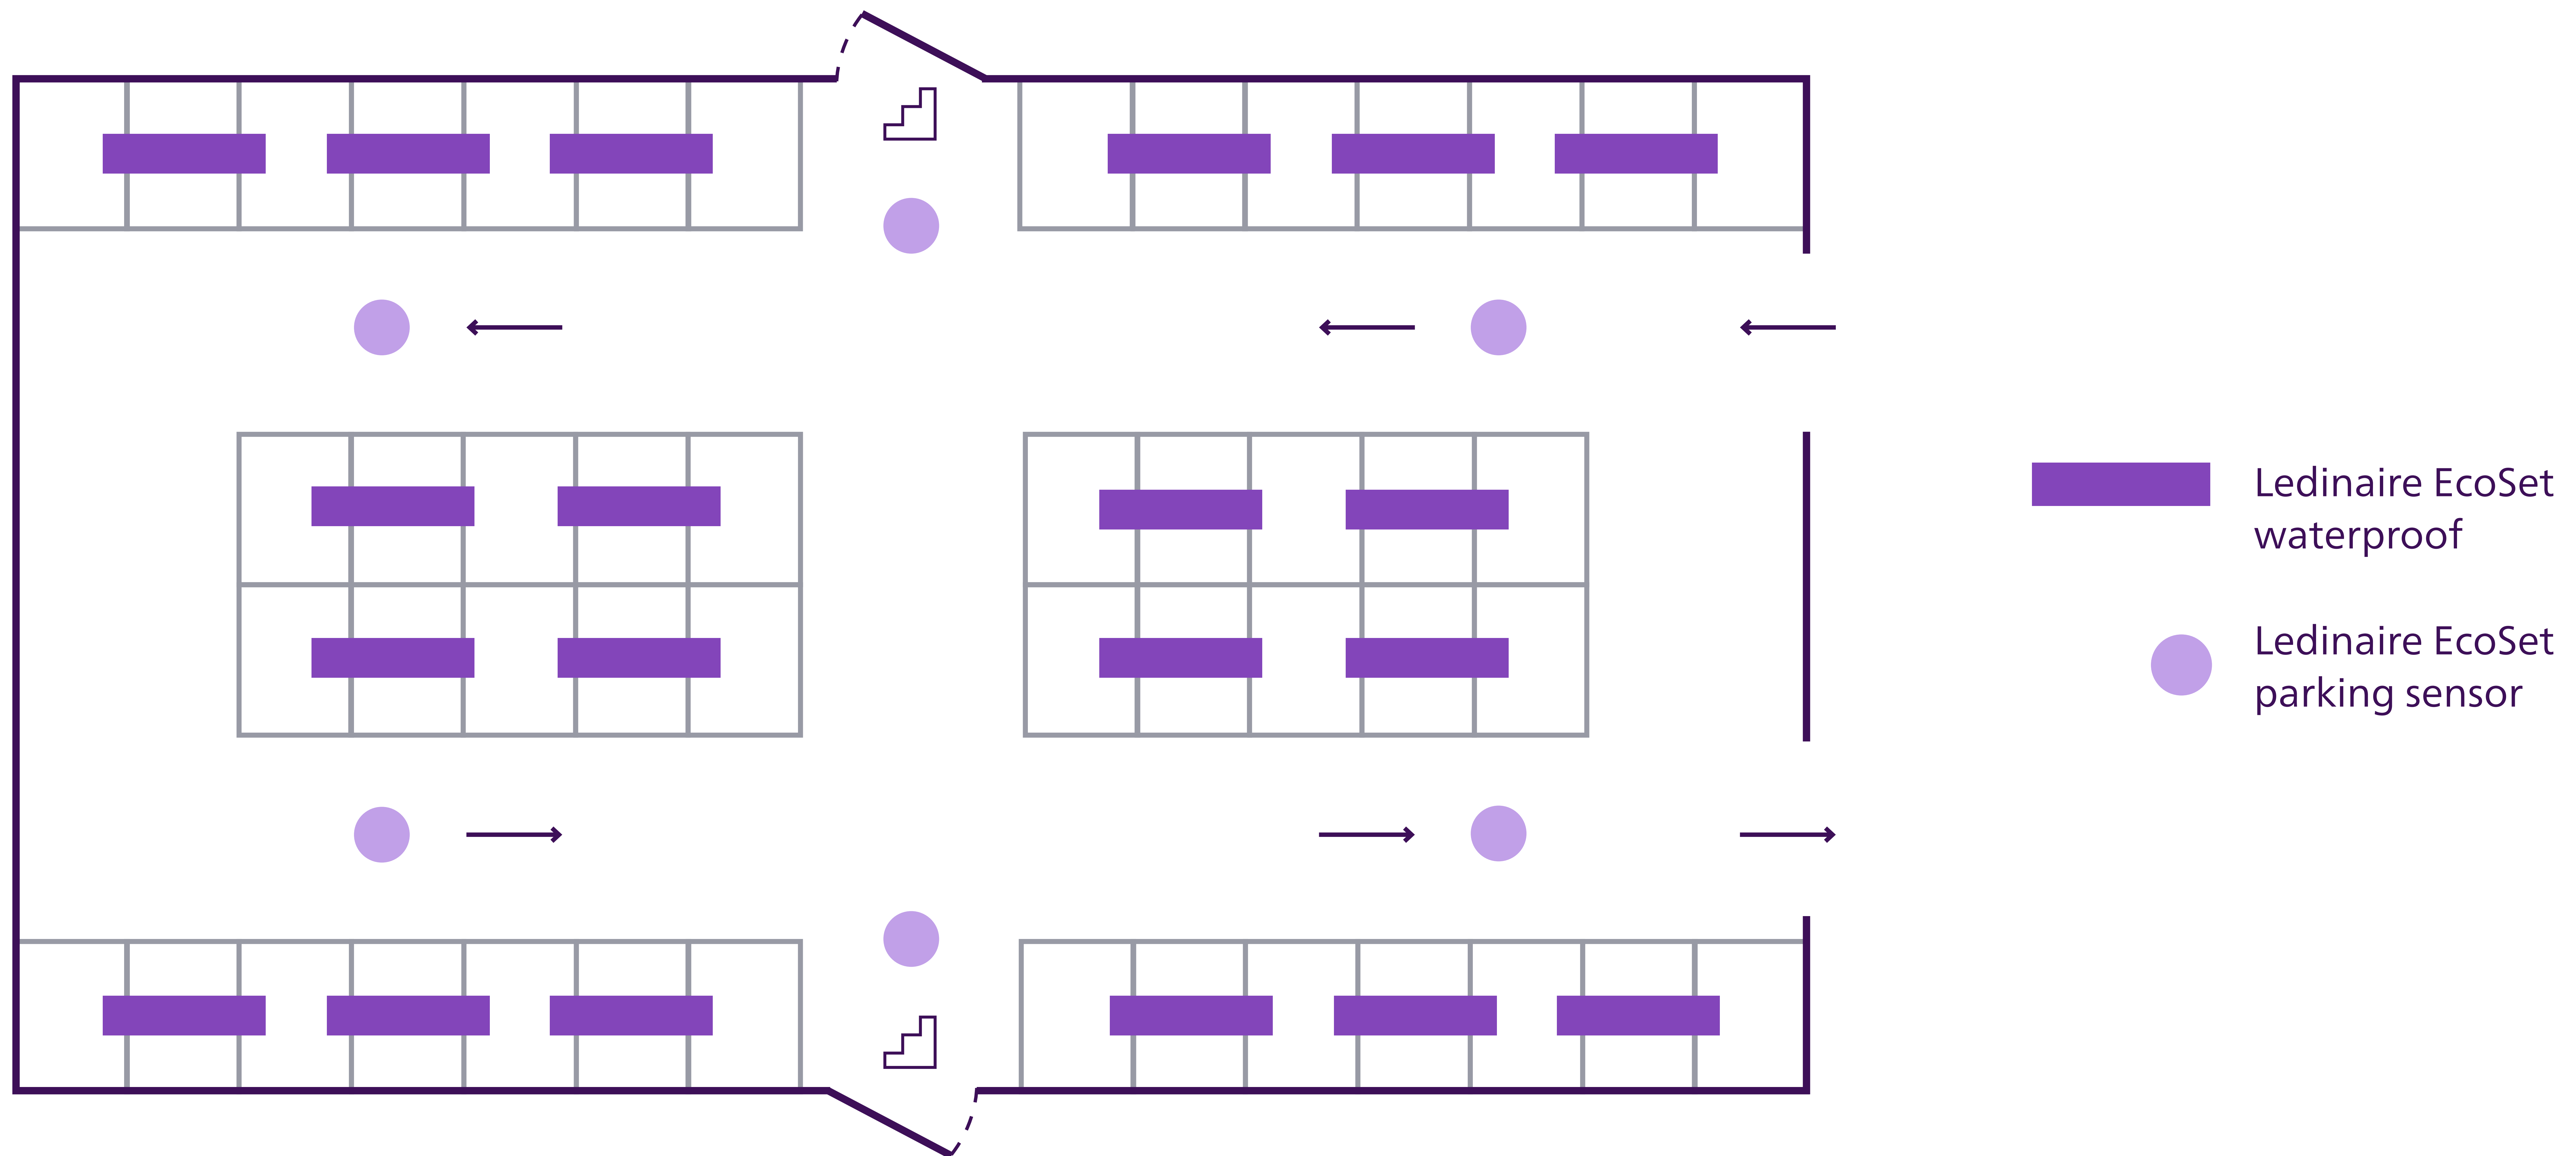

1. Prepare the setup

1

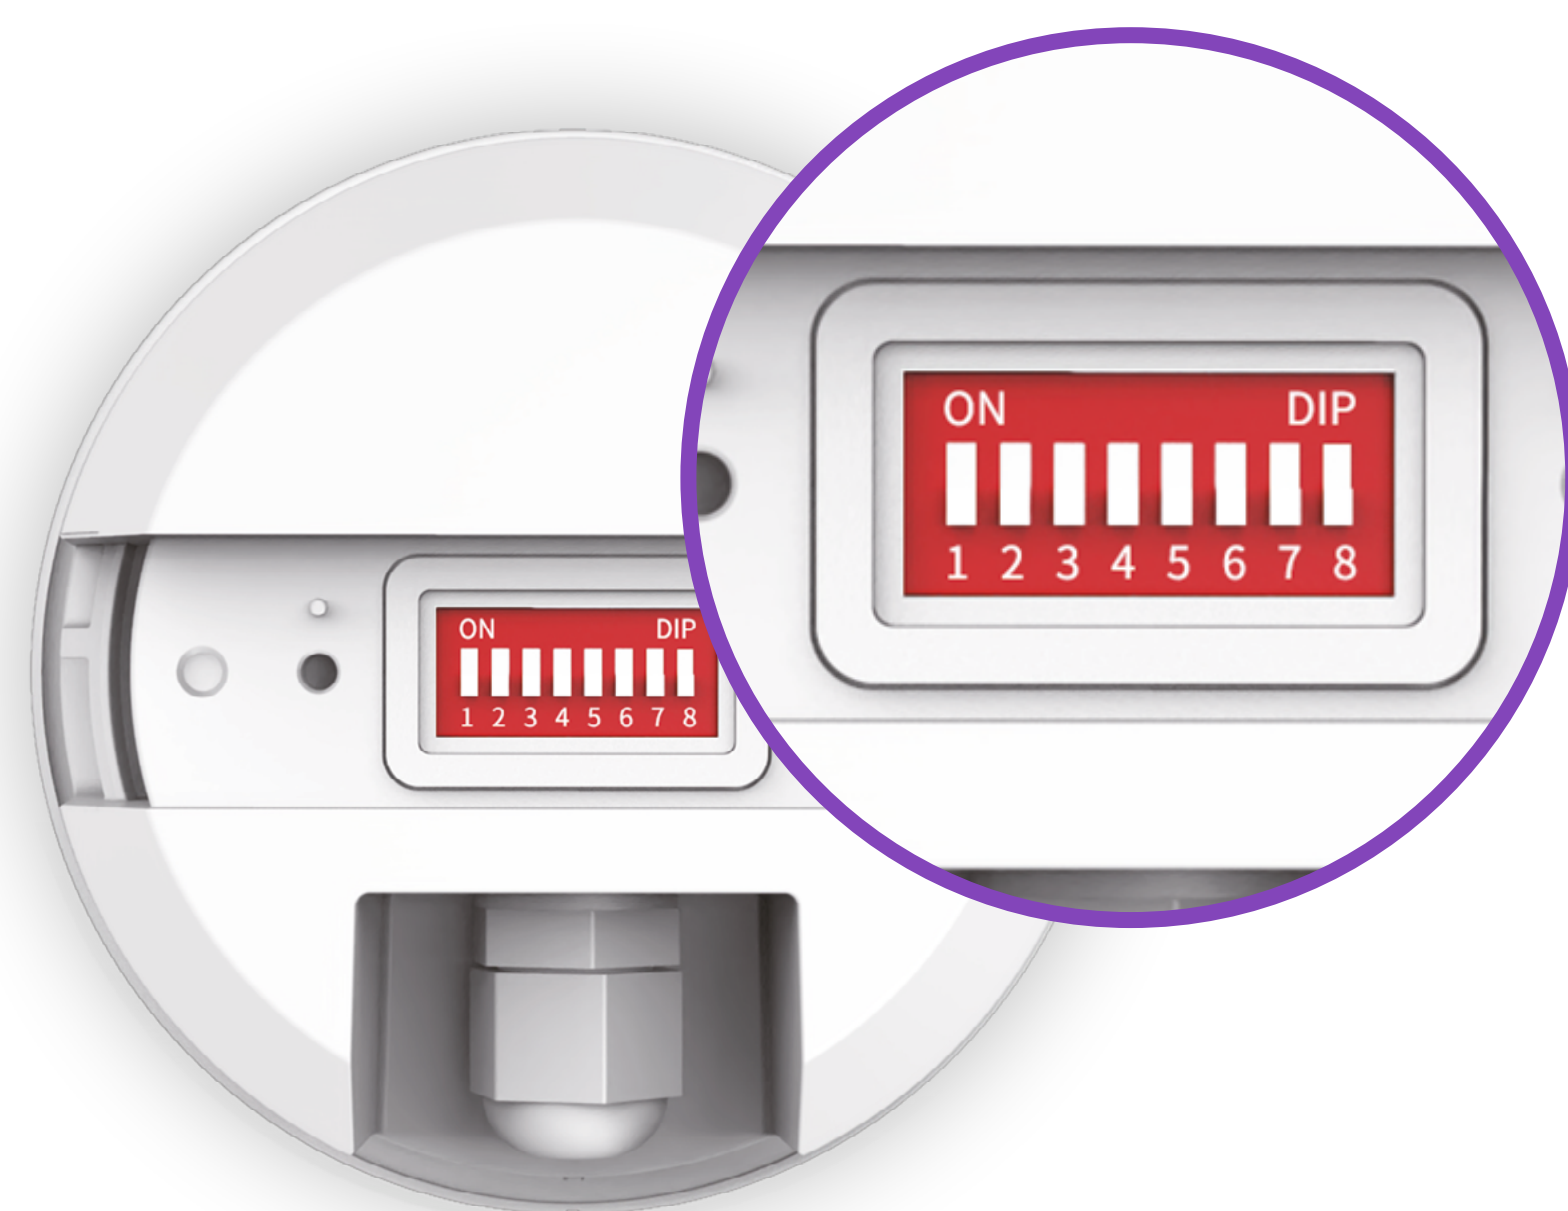

Optional:

Configure the settings via the dip switches on the back of the sensor. Please refer to the mounting instructions of the sensor included in the box.

		Dip switch position							
		1	2	3	4	5	6	7	8
Hold time	3min ± 18s (default)	●	●	-	-	-	-	-	-
	10min ± 1min	●	▲	-	-	-	-	-	-
	15min ± 1.5min	▲	●	-	-	-	-	-	-
	30min ± 3min	▲	▲	-	-	-	-	-	-
Dim/ background level	20% ± 2% (default)	-	-	●	●	-	-	-	-
	30% ± 3%	-	-	●	▲	-	-	-	-
	50% ± 5%	-	-	▲	●	-	-	-	-
	70% ± 7%	-	-	▲	▲	-	-	-	-
Signal range	Max high (default)	-	-	-	-	●	●	-	-
	High	-	-	-	-	●	▲	-	-
	Middle	-	-	-	-	▲	●	-	-
	Low	-	-	-	-	▲	▲	-	-
Mode of operation	Auto (default)	-	-	-	-	-	-	●	-
	Demo	-	-	-	-	-	-	▲	-
Sensitivity	Normal (default)	-	-	-	-	-	-	-	●
	Low	-	-	-	-	-	-	-	▲

▲ = On ● = Off

2



Install lights and sensors per lighting plan.

Note: The lights and sensors should be ON for > 30 seconds before moving to the next step.

The sensor indicator (red LED) is ON for ~30 seconds.


2. Set up lights with sensors. Test lights of the linked group.

Set up lights and sensors

1



Activate the sensor

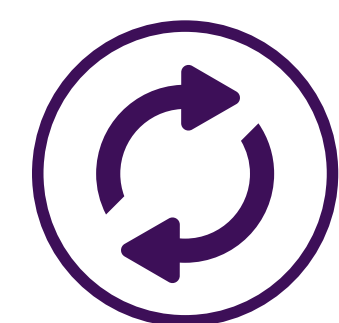

Press and hold the above button on the sensor for **5-8 seconds**.

- › **The LED in the sensor unit blinks 3 times** to indicate that the automatic linking process has started.
- › **The linked luminaires will blink 3 times within 2 minutes.**

2




Luminaires are automatically linked

Wait for the linked luminaires to respond before activating the next sensor.

It takes up to 2 minutes for the luminaires to link to a sensor.

Test setup

3

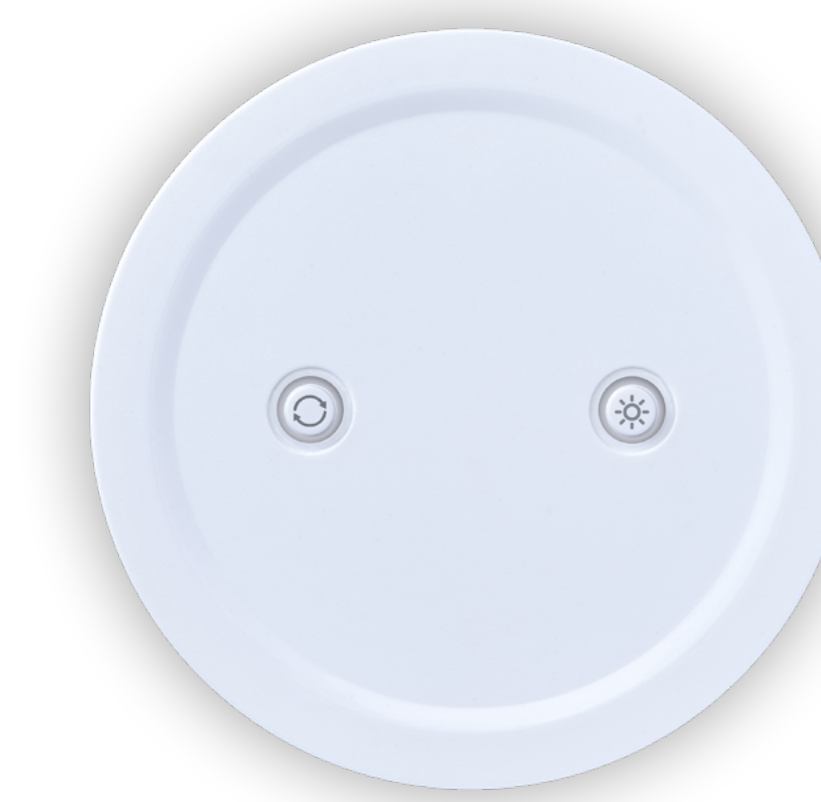

Test the setup

Walk out of the area/sensor range.

- › Lights will dim after hold time.

If the new setup does not work



Re-activate the sensor



Press and hold the above button on the sensor for **5-8 seconds**.

› **The LED in the sensor unit blinks 3 times** to indicate that the automatic linking process has started.

› **The re-linked luminaires will blink 3 times within 2 minutes.**

For more troubleshooting advice, refer to the application manual at [philips.com/ledinaire](https://www.philips.com/ledinaire)

