



12NC	Designation	Compatible driver type	Retrofit length type	Trunking system
910505103992	LL850Z 491 H4 SR2DALI	DIA	T5 A = 1476mm	Maxos
910505103993	LL850Z 581 H4 SR2DALI	DIA	TLD A = 1527mm	4MX850

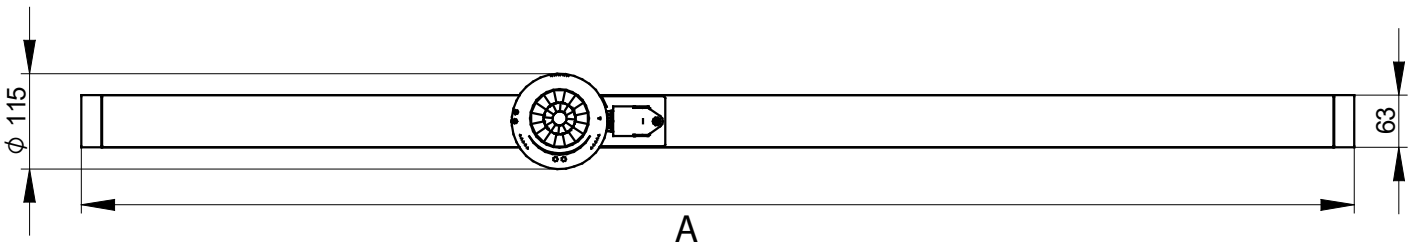

**Warning**


- Max 20 Dali drivers connected to 1 sensor.
- Emergency: max 1 EM-driver, i.e. TrustSight DALI connected to 1 sensor. Do not connect more than one H4 unit to single Dali line.
- Must work with drivers comply with DALI parts 251, 252, 253.
- Cannot work with drivers comply with DALI part 250 (SRD, SIA). High risk of damage!!!
- Max 18m of line-of-sight distance to next RF node.
- Do not connect any external voltage source to Dali Line (C2R cable).
- Place heat radiating devices outside of the monitoring cone.
- Avoid drafts (e.g. from ventilators or heating systems).

## Control unit

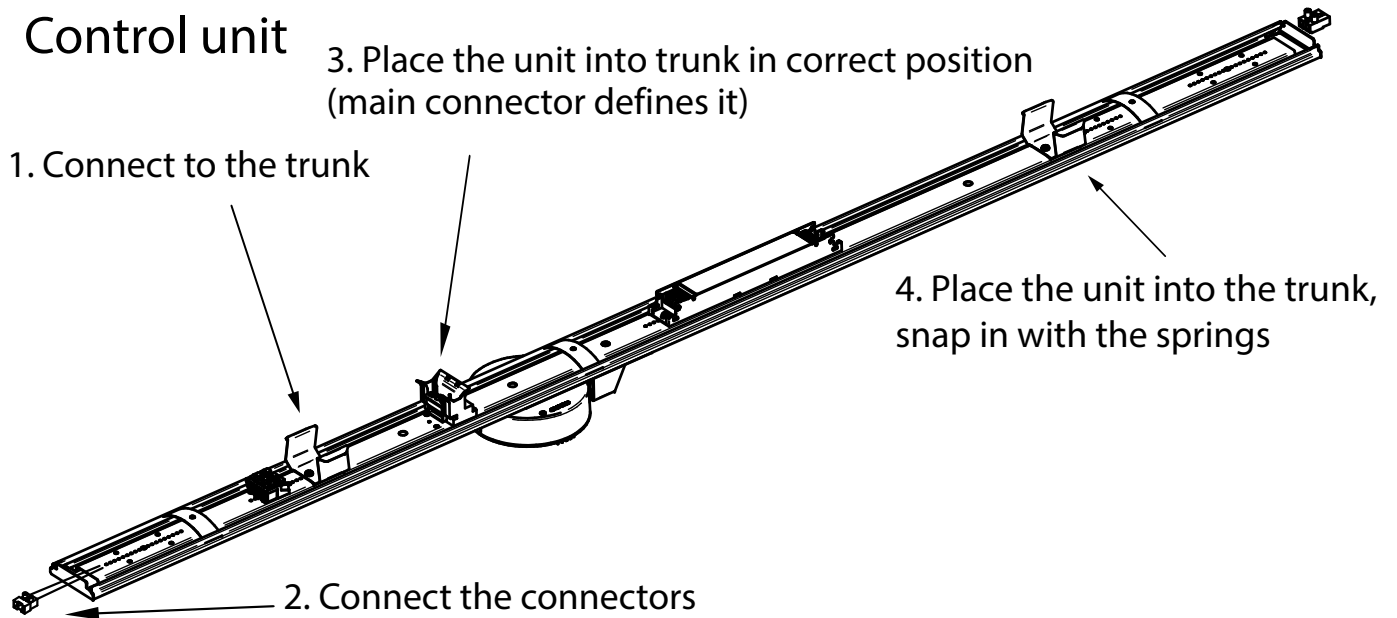


## Blind unit

Fixing in the trunk:  
Snap into the trunk

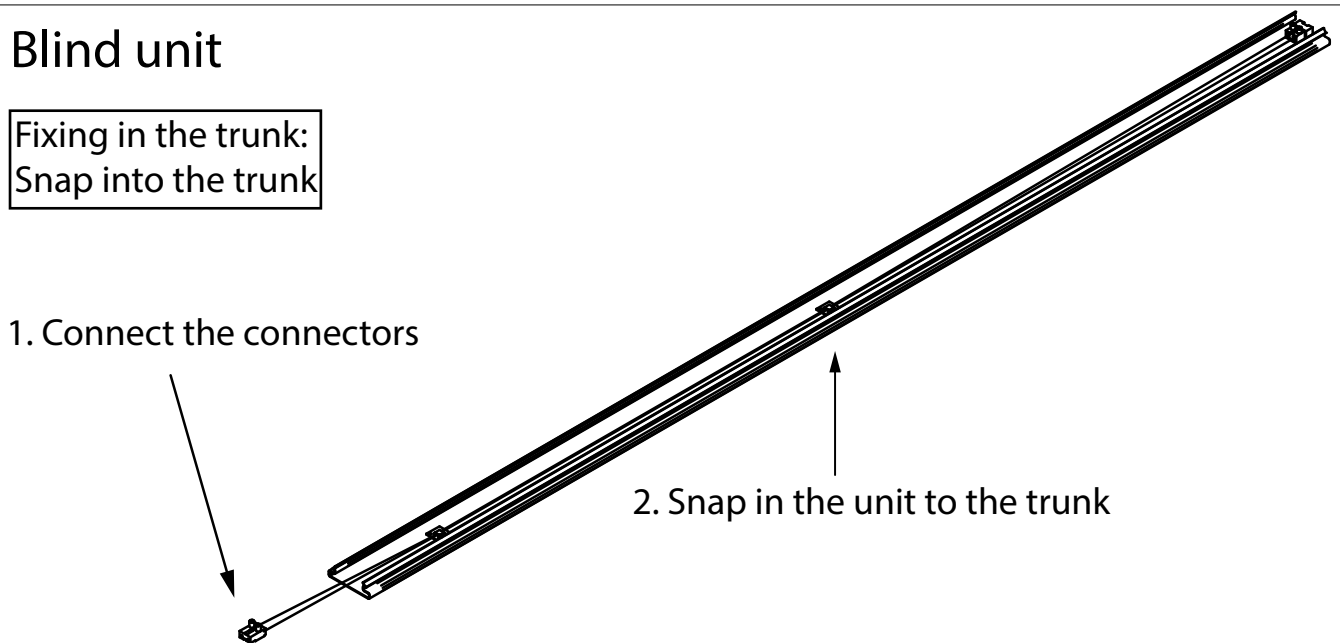


## Lighting unit


Fixing in the trunk:  
See on next page

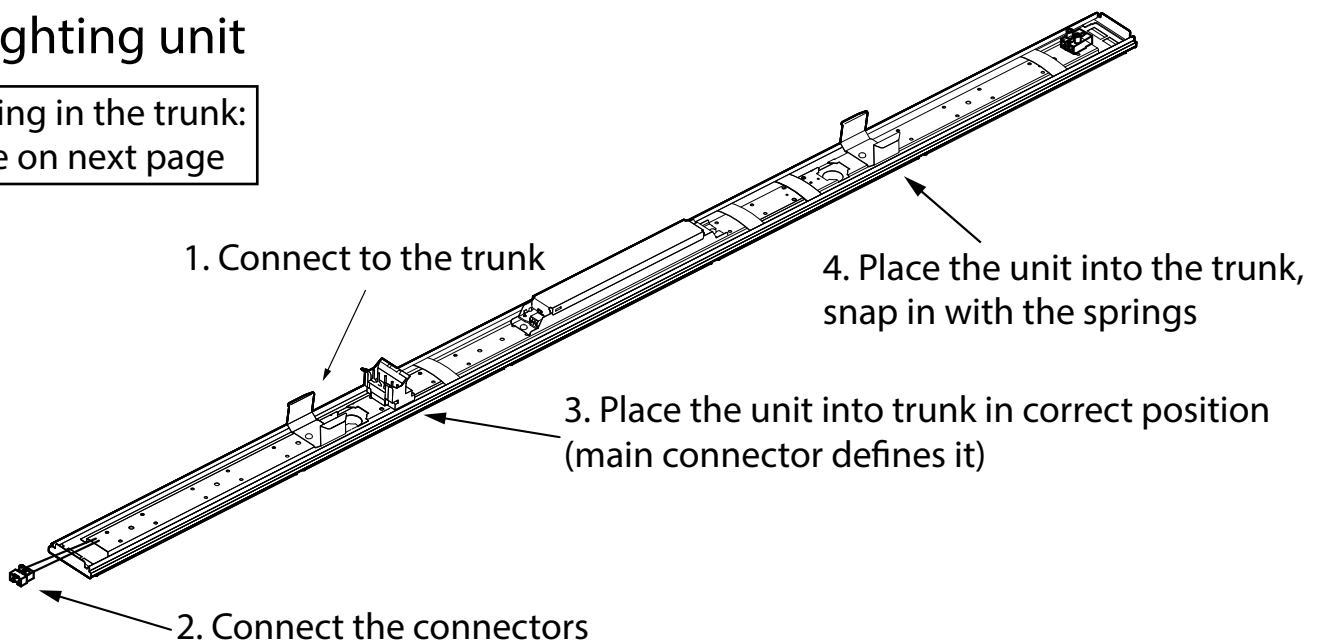



# Installation of the units

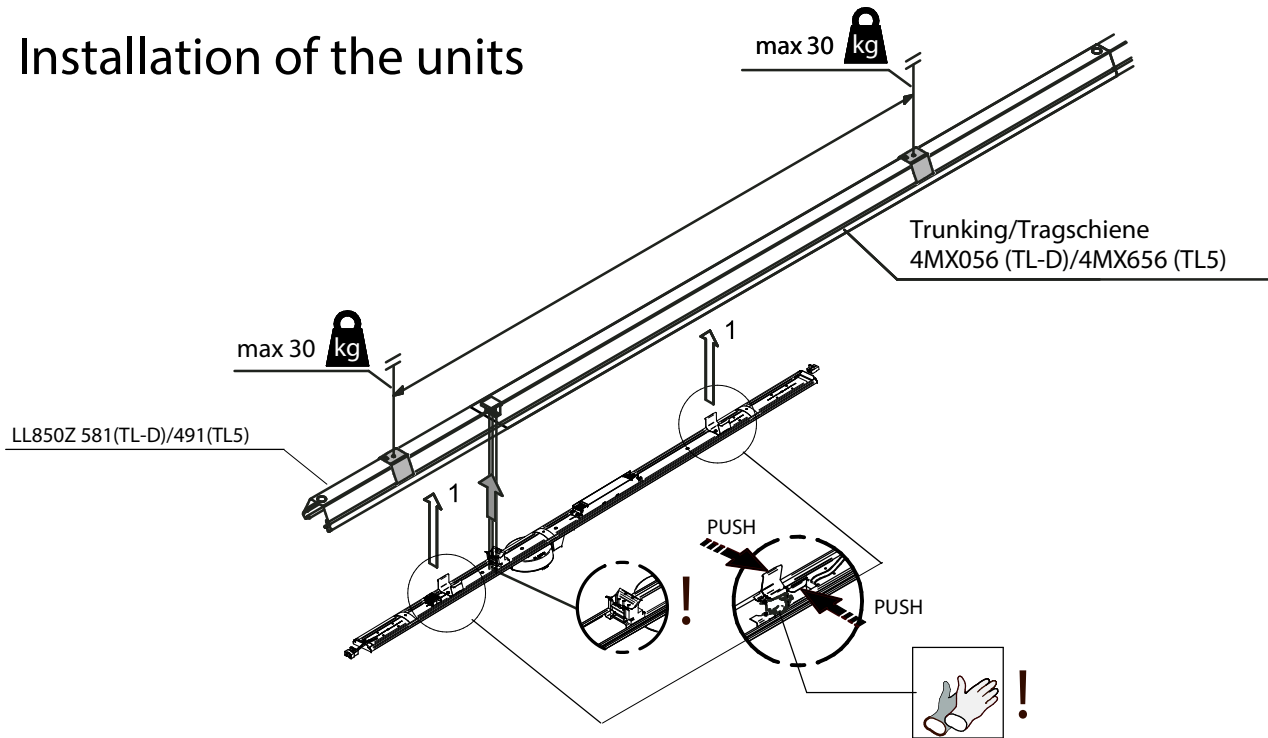


## C-2R

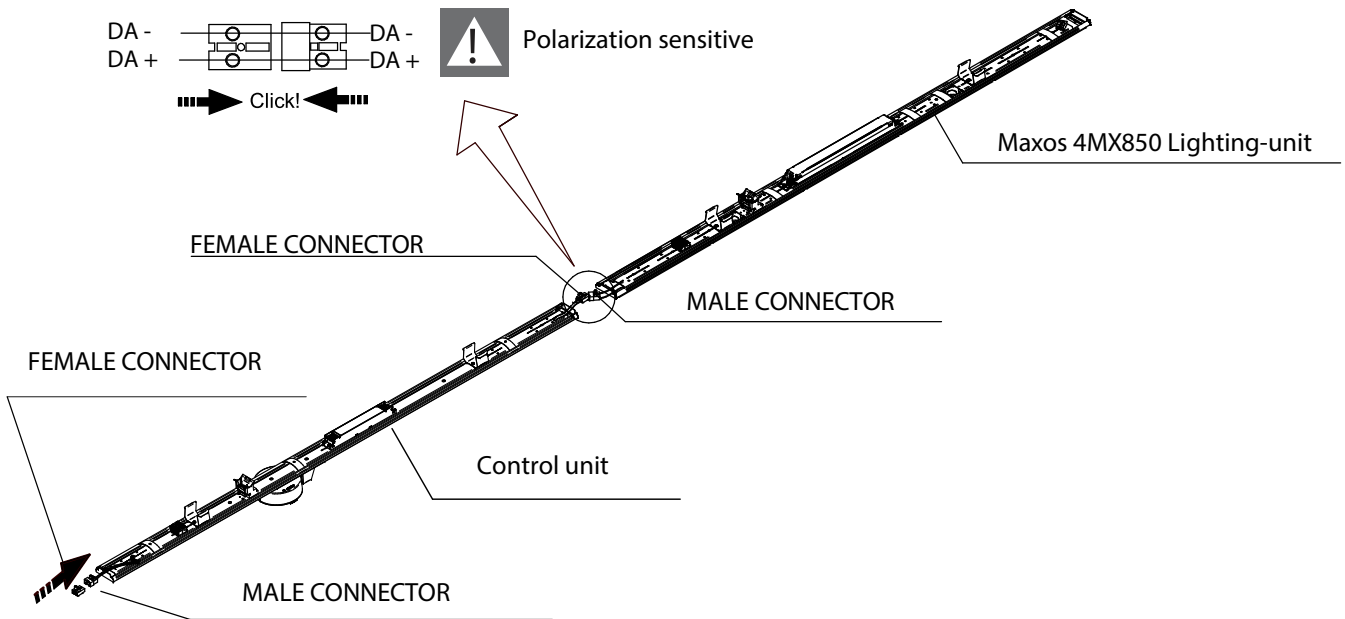


## Sensor installation

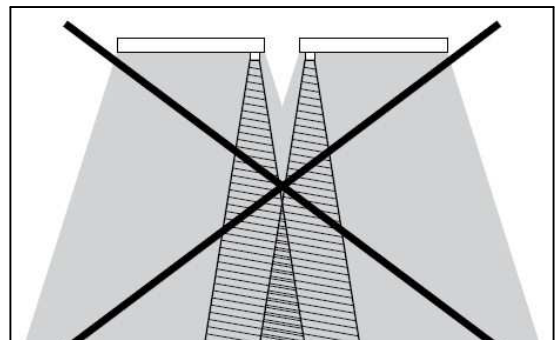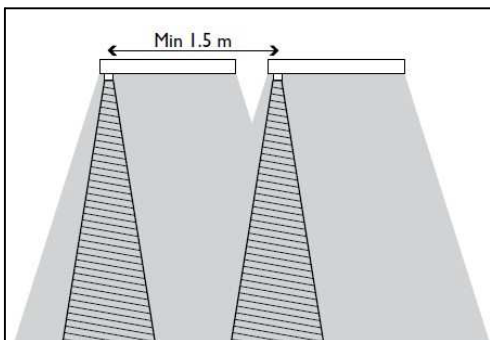


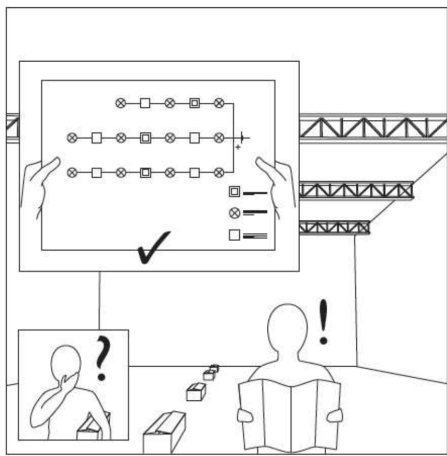


You must have a lighting plan if you install InterAct Industry System

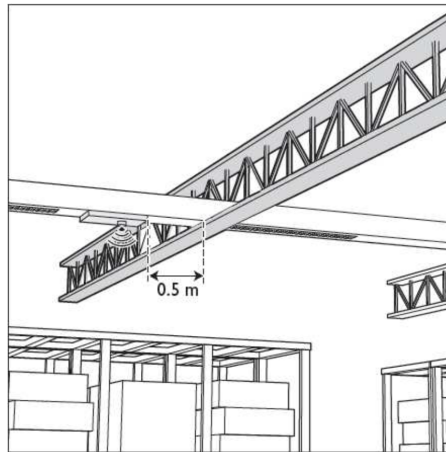

Do not install the InterAct System control unit close to steel or concrete constructions.

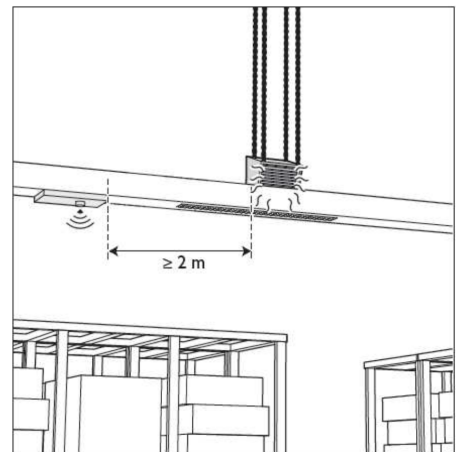


Keep the distance to HVAC devices.

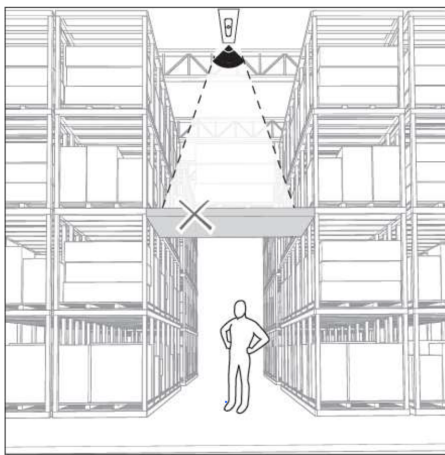



Do not block the view of the sensor.

### Occupancy sensing

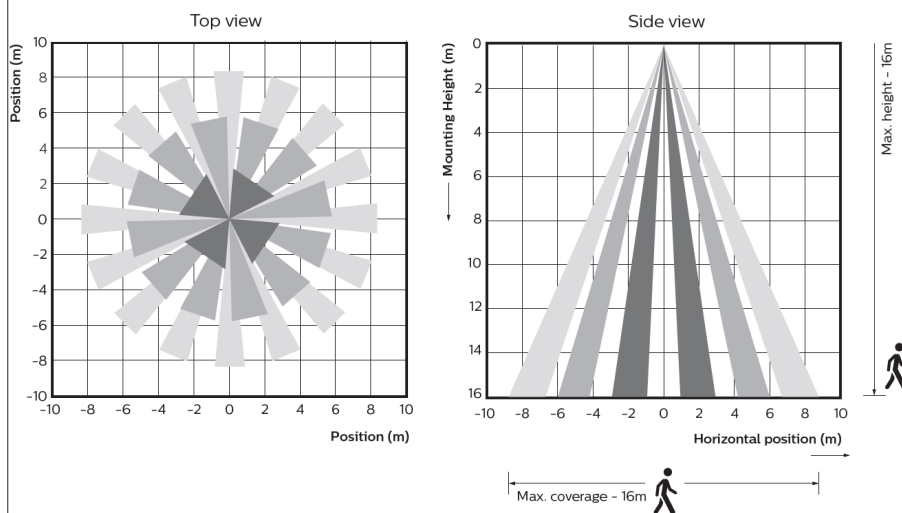


### Daylight sensing

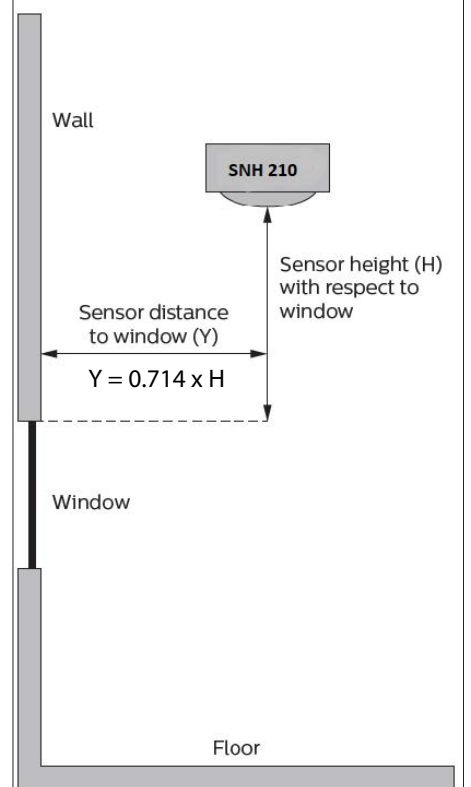

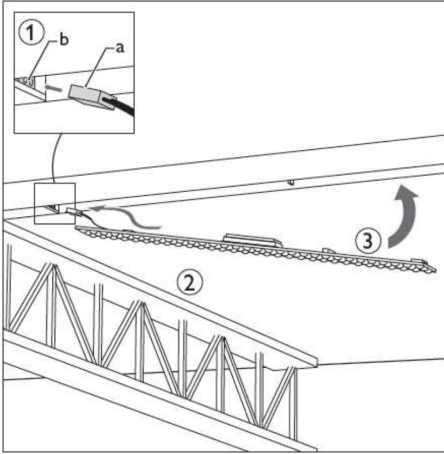

### Installation

- 1 Put the flying lead (a) in the fixed connector (b).
- 2 Push the connected side of the luminaire in the trunking line.
- 3 Push the other side of the luminaire in the trunking line.

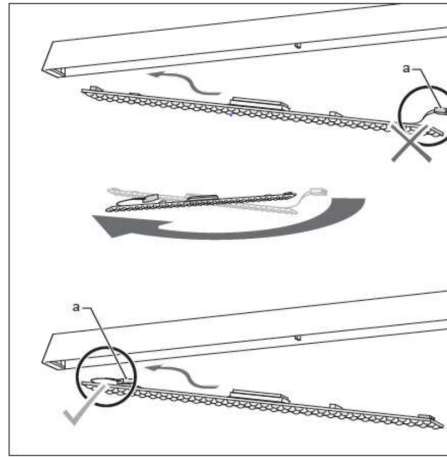


### CAUTION

You must start with the side that has the flying lead (a).





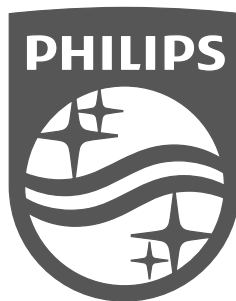

© 2023 Signify Holding

All rights reserved. Reproduction in whole or in part is prohibited without the prior written consent of the copyright owner. The information presented in this document does not form part of any quotation or contract, is believed to be accurate and reliable and may be changed without notice. No liability will be accepted by the publisher for any consequence of its use. Publication thereof does not convey nor imply any license under patent- or other industrial or intellectual property rights.

Signify Holding  
The Netherlands