





























- for use with DIA drivers. DON'T USE with PSD, SRD and SIA drivers (high risk of DAMAGE)
- use max. 20 DALI drivers per one DALI line segment
- use supplied T2T connector to electrically separate group of 1 sensor + 20 drivers with another group along the line
- do not connect more than one sensor unit to one DALI line segment
- do not connect more than one emergency light unit to one DALI line segment
- do not connect any external power sources to DALI
- max 20 m distance (line-of-sight) between RF nodes







