

LIGHTOLIER

by  Signify

IS-C3C

Downlighting

Calculite Precision LED Cylinders, Surface, Wall, Pendant




C2CSDL
C3CSDL



C2CWDL
C3CWDL



C2CWUD
C3CWUD

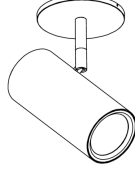

C2CSA
C3CSA



C2CPSDL/C2CPCDL
C3CPSDL/C3CPCDL

Read and understand these instructions before installing luminaire.



This luminaire is intended for installation in accordance with the National Electrical Code and local regulations. To assure full compliance with local codes and regulations, check with your local electrical inspector before installation. To prevent electrical shock, turn off electricity at fuse box before proceeding. Allow fixture to cool before handling.


Retain these instructions for maintenance reference

Cylinder SKU Series	Use with Calculite Optics
C2CSDL, C2CPSDL, C2CPCDL, C2CWDL, C2CWUD	C2CR_-SERIES
C2CSA	C2CO_-SERIES
C3CSDL, C3CPSDL, C3CPCDL, C3CWDL, C3CWUD	C3CR_-SERIES
C3CSA	C3CO_-SERIES


Caution (RISK OF FIRE)

Use only with reflectors and accessories compatible with this series and provided by Signify. Use of other manufacturers products may void the Underwriters Laboratories listing and could constitute a fire hazard.

CEILING MOUNT

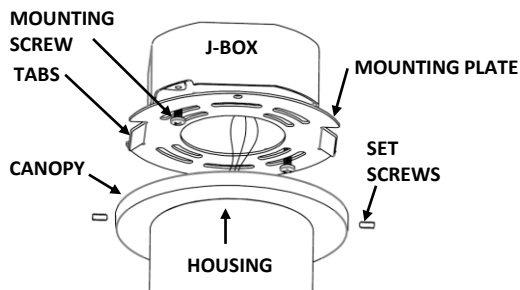

WALL MOUNT

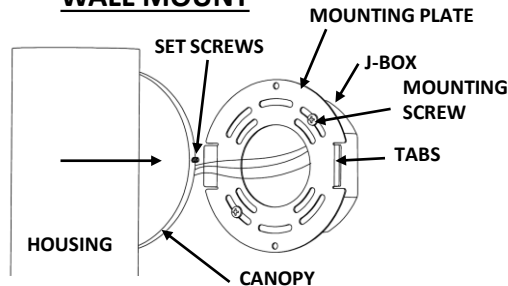

CAUTION:

- C_CSDL, C_CPSDL, C_CPCDL SERIES are CEILING MOUNT ONLY.
- C_CW SERIES are WALL MOUNT ONLY.
- C_CSA SERIES are CEILING OR WALL MOUNT.

Instructions for Ceiling and Wall mount series.

Step 1

- Fasten **MOUNTING PLATE** to **J-BOX** using two **MOUNTING SCREWS** ensuring **TABS** are away from mounting surface.
- NOTE; FOR WALL MOUNTING ENSURE TABS ARE ALIGNED PARALLEL TO FLOOR.**
- Bring supply wires from J-BOX through center hole in **MOUNTING PLATE**.

Step 2




- CONNECT PROPER VOLTAGE SUPPLY WIRES TO WIRES ON HOUSING using wirenuts.
- Connect ALL GROUND wires (green or bare copper) from HOUSING/CANOPY/ MOUNTING PLATE to supply GROUND WIRE (green).
- Connect WHITE neutral wire from housing to supply WHITE neutral wire.
- Connect BLACK hot wire from housing to supply BLACK hot wire.
- 0-10V or Lutron dimming**
- Connect Purple or dim (+) control wire from **housing** to Purple supply wire.
- Connect Grey or dim (-) control wire from **housing** to Grey supply wire.

Step 3

- MOUNT HOUSING TO **MOUNTING PLATE**.
- Place ALL wires into **J-BOX** through center hole in **MOUNTING PLATE**.
- Align **SET SCREWS** on **CANOPY** with **TABS**.
- Push **CANOPY** over **MOUNTING PLATE** taking care not to pinch wires.
- Tighten (2) **SET SCREWS** on **TABS** using allen wrench.

IS-C3C

DOWNLIGHTING

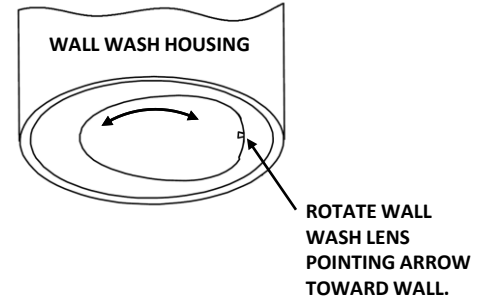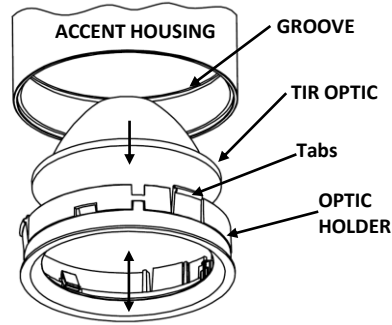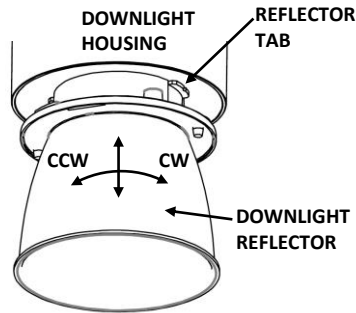

Instructions for reflector installation.

DOWNLIGHT REFLECTOR

- Push downlight reflector against **LED HOLDER** in housing.
- Rotate **CW** (clockwise) engaging **REFLECTOR TAB** in **LED HOLDER**.
- To remove **REFLECTOR** rotate **CCW** (counterclockwise).


ACCENT REFLECTOR

- Pull **OPTIC HOLDER** out of **HOUSING**.
- Snap **TIR OPTIC** into **OPTIC HOLDER**.
- Push **OPTIC HOLDER TABS** into **HOUSING** snapping into **GROOVE**.

WALL WASH LENS

- Rotate **WALLWASH LENS** pointing **ARROW** toward wall.
- Lens can be rotated in other orientations for desired lighting affect.

Instructions for Accent.

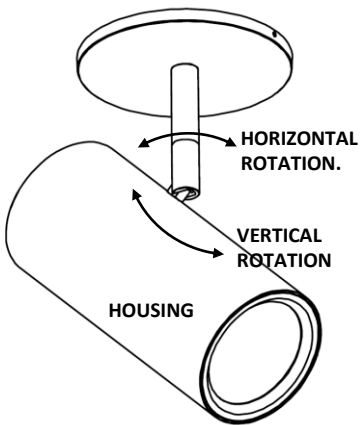


- Grip **HOUSING** and rotate **VERTICALLY** and **HORIZONTALLY** to aim light in desired direction.

CAUTION:

VERTICAL AND HORIZONTAL ROTATIONS HAS MECHANICAL STOPS. DO NOT FORCE HOUSING PAST STOPS.

Instructions for Pendant Stem mount.

C2CPSDL, C2CPSWW, C3CPSDL, C3CPSWW:
USE WITH CASK36_STEM KIT

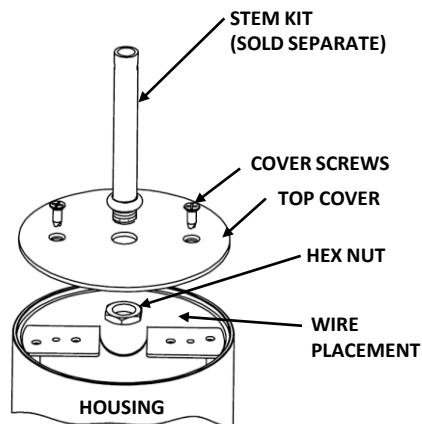

- Follow instructions included in **STEM KIT**.
- Place all wire connections inside **HOUSING**.
- Fasten **TOP COVER** to **HOUSING** using **COVER SCREWS**. Ensure wire are not pinched.

Signify

LIGHTOLIER

by  Signify

IS-C3C

Éclairage vers le bas

Cylindre Calculite Precision DEL, Surface, Mural, Suspendu




C2CSDL
C3CSDL




C2CWDL
C3CWDL



C2CWUD
C3CWUD

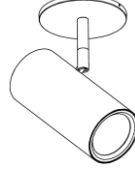

C2CSA
C3CSA



C2CPSDL/C2CPCDL
C3CPSDL/C3CPCDL

Veillez prendre connaissance de ces directives avant de procéder à l'installation du luminaire.



Pour éviter les chocs électriques, couper le courant au panneau électrique avant de commencer. Pour assurer un bon fonctionnement sécuritaire, ce luminaire doit être mis à la terre. Consulter un inspecteur en électricité pour s'assurer que tout est conforme aux exigences du Code national de l'électricité et règlements en vigueur avant de procéder à l'installation.


Conserver ces directives à titre de références.

Cylindre code Séries	Utiliser avec les optiques Calculite:
C2CSDL, C2CPSDL, C2CPCDL, C2CWDL, C2CWUD	C2CR_-SÉRIES
C2CSA	C2CO_-SERIES
C3CSDL, C3CPSDL, C3CPCDL, C3CWDL, C3CWUD	C3CR_-SÉRIES
C3CSA	C3CO_-SERIES


ATTENTION : RISQUE D'INCENDIE.

UTILISER SEULEMENT AVEC DES RÉFLECTEURS DE SIGNIFY LIGHTOLIER. L'UTILISATION DE RÉFLECTEURS D'AUTRES MANUFACTURIER PEUT ANNULER LA CERTIFICATION.

Montage au plafond

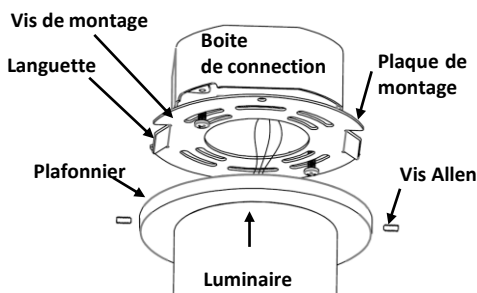

Montage mural

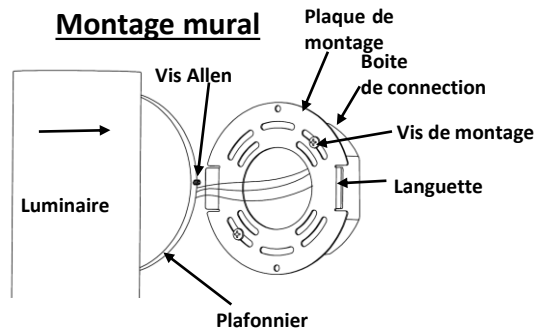

ATTENTION:

-C_CSDL, C_CPSDL, C_CPCDL SÉRIES sont: Montage au plafond seulement.

-C_CW SERIES sont: Montage mural seulement.

-C_CSA SERIES sont: MONTAGE AU PLAFOND OU MURAL.

Instructions d'installation aux plafonds ou murals.

Étape 1

-Installer la **plaque de montage** sur la **boîte de connection** avec les **vis de montage**. Orienter les **languettes** à l'opposé de la surface de montage.

NOTE: Pour le montage mural, les languettes doivent être parallèles au plancher.

-Sortir les fils d'alimentation par l'ouverture de la **plaque de montage**.

Étape 2

-Faire les connections appropriées entre l'alimentation et le **luminaire**.

-Connecter tout les fils de la mise à la terre ensemble (Vert ou dénudé en cuivre) entre le **luminaire** et l'alimentation.

-Connecter le NEUTRE (blanc) de l'alimentation avec le NEUTRE (blanc) du **luminaire**.

-Connecter le fil sous-tension (noir) de l'alimentation avec le fil sous-tension (noir) du **luminaire**.

Gradation 0-10V ou Lutron

-Connecter le fil violet ou dim(+) du gradateur avec le fil violet du **luminaire**.

-Connecter le fil gris ou dim (-) du gradateur avec le fil gris du **luminaire**.

Étape 3

-Pousser les fils à l'intérieur de la **boîte de connection**.

-Aligner les **vis Allen** du **plafonnier** avec les **languettes**.




-Installer le **luminaire** sur la **plaque de montage**.

S'assurer que les fils ne soient pas pincer.

-Visser les 2 **vis Allen** sur les **languettes** avec la **clé Allen**.

IS-C3C

ÉCLAIRAGE VERS LE BAS

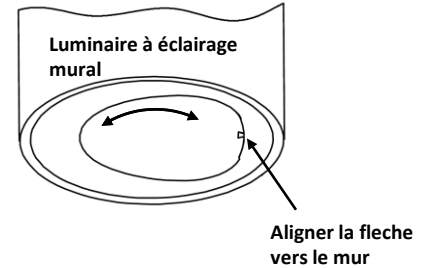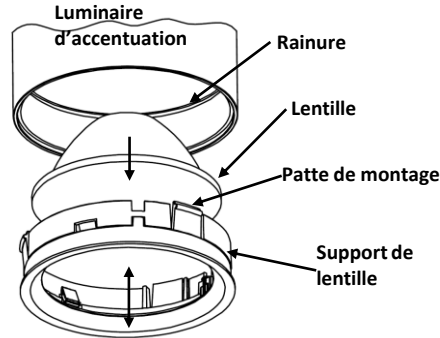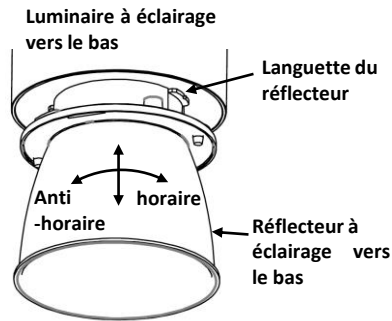

Instructions d'installation des optiques.

Réflecteurs à éclairage vers le bas

- Pousser le **réflecteur** à l'intérieur du **luminaire à éclairage vers le bas**.
- Tourner dans le sens **horaire** pour engager.
- Pour enlever tourner le **réflecteur** dans le sens **anti-horaire**.


Lentille

- Enlever le **support de lentille**.
- Insérer la **lentille** dans le **support de lentille**.
- Pousser les **pattes de montage** du **support de lentille** dans le **luminaire d'accentuation** jusqu'à la **rainure**.

Luminaire à éclairage mural

- Aligner la fleche de la lentille vers le mur.
- La lentille peut être aligner dans n'importe quelle direction.

Instructions pour luminaire d'accentuation.

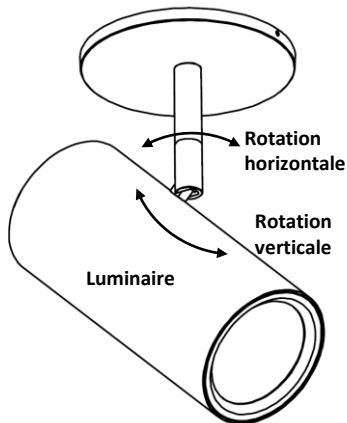


- Tenir le **luminaire** et faire les **rotations verticales et horizontales** dans la direction requise.

ATTENTION:

Les axes de rotations Vertical et Horizontale ont des butées d'arrêt. Ne pas forcer au delà des butées d'arrêt.

Instructions pour les luminaires suspendus par tige.

C2CPSDL, C2CPSWW, C3CPSDL, C3CPSWW:
UTILISER AVEC LES KIT DE TIGES CASK36_ SEULEMENT

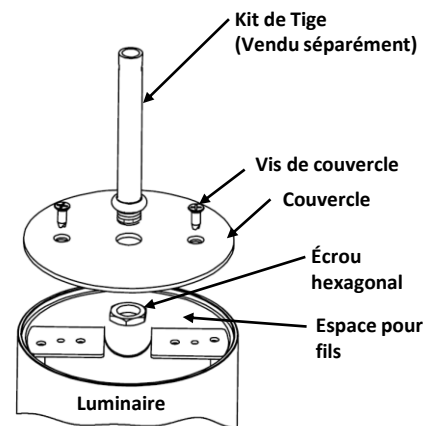

- Suivre les instructions incluses avec les Kit de tiges.
- Mettre les connexions à l'intérieur du **luminaire**.
- Remettre le **couvercle** avec les **Vs de couvercles**.
- S'assurer que les fils ne soient pas coincés.