


HALO


INSTALLATION INSTRUCTIONS FOR L-905 ADJUSTABLE "T" CONNECTOR

NOTE: For use with L-650 Series Track system ONLY. Electrical Ratings: 120V, 60HZ, 20A

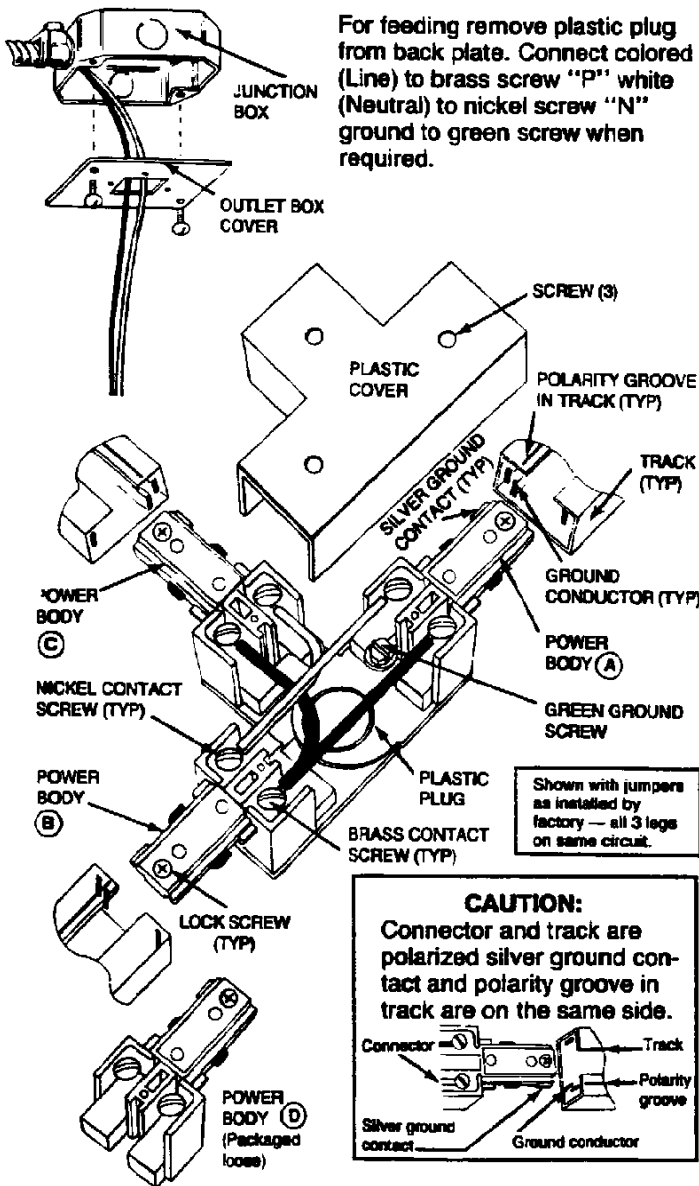


For feeding remove plastic plug from back plate. Connect colored (Line) to brass screw "P" white (Neutral) to nickel screw "N" ground to green screw when required.

CAUTION: Connector and track are polarized silver ground contact and polarity groove in track are on the same side.

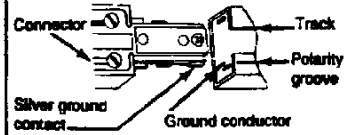

NOTE: Adjustable connector allows track to be powered at either end depending on installation requirements. L-905 is factory installed as shown silver ground contact on the inside of the "T" leg. Track connector is polarized. Silver ground contact is always on the same side as the polarity groove of the track.

ADJUSTABLE OPTIONS AVAILABLE

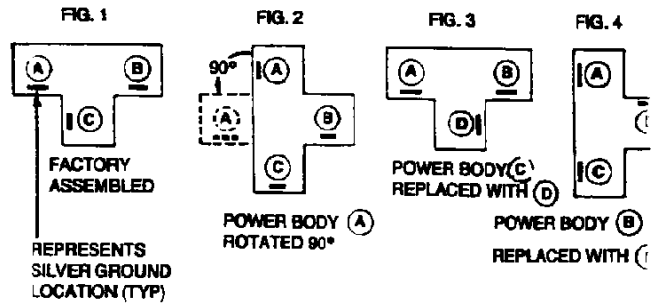

OPTION # 1

To use as factory assembled (Fig. 1) inserts each end of connector into end of each track making sure silver ground contact is on the same side as polarity groove in track. (Track and connector are polarized) secure connector to track by tightening lock screws on each end of connector.

OPTION # 2

To use as shown in (Fig. 2) remove (3) screws and plastic cover. Rotate power body (A) 90°. Install cover and screws assemble to track as described in Option #1.

OPTION # 3

To use as shown in (Fig. 3) remove (3) screws and plastic cover. From power body (C) loosen contact screws and remove black and white wire from under screw head. Remove one screw holding power body (C) to back plate. Install power body (D) (packaged loose) to back plate with screw. Secure black wire under brass screw "P" and white wire under nickel screw "N". Assemble cover and screws. Assemble to track as described in Option #1.

OPTION # 4

To use as shown in (Fig. 4) remove (3) screws and plastic cover. From power body (B) loosen contact screws and remove black and white wire from under screw head. Remove one screw holding power body (B) to back plate. Install power body (D) (packaged loose) to back plate with screw. Secure black wire under brass screw "P" and white wire under nickel screw "N". Assemble cover and screws. Assemble to track as described in Option #1.