


SURE-LITES

INSTALLATION INSTRUCTIONS - ES Series L.E.D. Edge-Lit Exit Signs

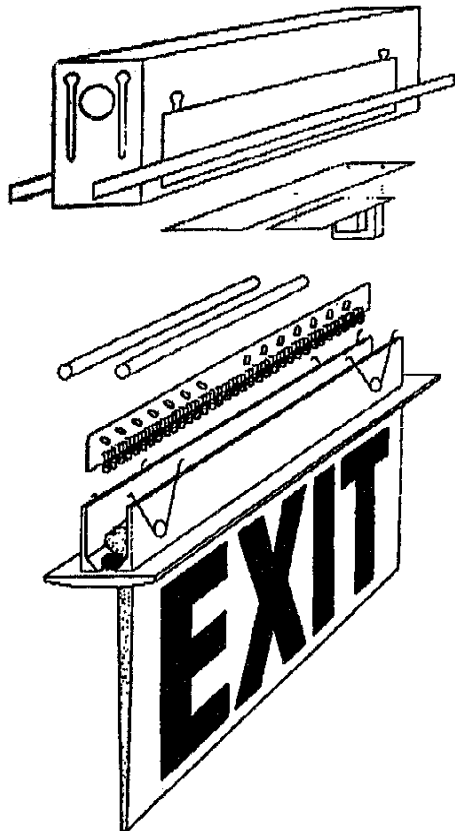

CAUTION !
TO AVOID THE POSSIBILITY OF ELECTRICAL SHOCK
DISCONNECT THE POWER FROM THE MAIN SOURCE BEFORE
BEGINNING INSTALLATION.

- 1 Provide an unswitched power source of 120 / 277 V 60 Hz., and attach to the housing using an approved electrical connector.
- 2 Secure the recessed housing to the wall or ceiling using the adjustable mounting brackets and plates. The housing must be installed so that the bottom of the housing is flush or slightly above (1/8" Max.) the finished surface of the wall or ceiling.
- 3 See the wiring diagram below for supply connections.
- 4 Compress the torsion springs and attach the trim assembly to the recessed housing. Do not push the trim assembly flush to the ceiling at this time.
- 5 Connect the two pin connector from the power board to the two pin connector coming from the trim assembly. Note: there is one connector for each illuminated face.
- 6 For self powered units only, connect the three pin connector from the power board to the three pin connector coming from the trim assembly.
- 7 Push the trim assembly up flush to the wall or ceiling to finish installation.

